

SANICARE Handheld Bidet Sprayer Kit Instruction Manual

Parts Included:

1. Handheld Sprayer;
2. Pressure Control T-valve Adapter;
3. Anti-explosion Sprayer Hose;
4. Sprayer Holder with Steel Hook for Handheld Sprayer;
5. Screws & Wall Anchors to Mount only Sprayer Holder to the Wall (If preferred over hanging on toilet);
6. Extra Washer: 2 Extra Hose Rubber Washers (smaller washers, DO NOT use as a washer for T-valve adapter), 1 Extra T-Valve Adapter Washer (larger washer).



Before Installation:

Check the water supply line: If the line that connects the toilet tank to the water supply shutoff valve is a rigid pipe, you will need to purchase a flexible water supply hose to replace it before installing the SANICARE Bidet Sprayer. Depending on length, the water supply line can be found at local hardware stores.

Installation:

Step 1: Turn off the water supply valve at the wall (**Figure 1-A**);

Step 2: Flush toilet (holding down the handle) to completely empty the tank;

Step 3: Disconnect flexible water supply line from under toilet tank (**Figure 1-B**). Check that the Rubber Washer is lying Flat inside the Hexagonal Nut of T-valve adapter. Connect the Hexagonal Nut of T-valve adapter, without cross-threading, to the toilet tank where the water supply line was just removed (**Figure 2-A**).

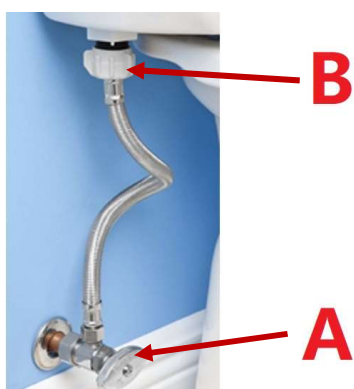


Figure 1

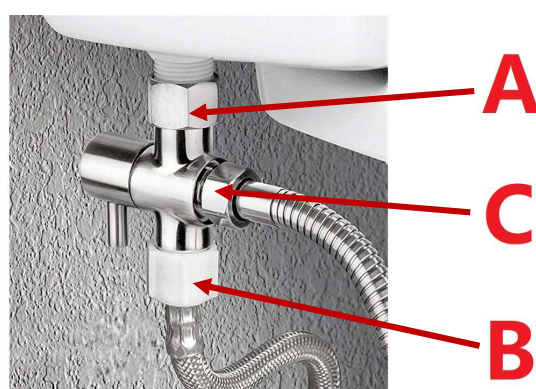


Figure 2

Step 4: Connect the nut of water supply line, without cross-threading, into the bottom of T-valve adapter (**Figure 2-B**).

Step 5: Unscrew the blue caps off each end of Sprayer Hose. Make sure there is a flat rubber washer inside each end of hose. Screw shorter head end (Hexagonal Nut) of hose to the T-valve adapter (**Figure 2-C**) and screw longer head end (Cone Nut) of hose to the SANICARE Handheld Sprayer. Hand tightening is enough.

Step 6: Mount Sprayer Holder


Option 1: Toilet Mount (Recommended Option) - Remove the toilet tank lid and hang the sprayer holder with hook on

the side of the toilet tank.

Option 2: Wall Mount - Unscrew the two screws on the Sprayer Holder. This will remove the steel Hook from the Sprayer Holder. Position the Sprayer Holder where desired on the wall. Screw the two longer Screws provided to mount the Sprayer Holder onto the wall. Use Wall Anchors for stronger attachment to wall if necessary.

Step 7: Check for leaks

After installing the SANICARE Bidet Sprayer Kit, turn the lever on the T-Valve Adapter to the DOWN position. Then turn the water supply line valve back on and check for leaks. If leaking occurs around any of the nuts, turn off water and check for cross-threading and proper installation of washers. If leaking continues, tighten the leaking nuts an extra ¼ to ½ turn. Repeat these steps until the leaking stops. If you are unable to solve a leaking problem, please email us at sales@sanicarebidet.com.

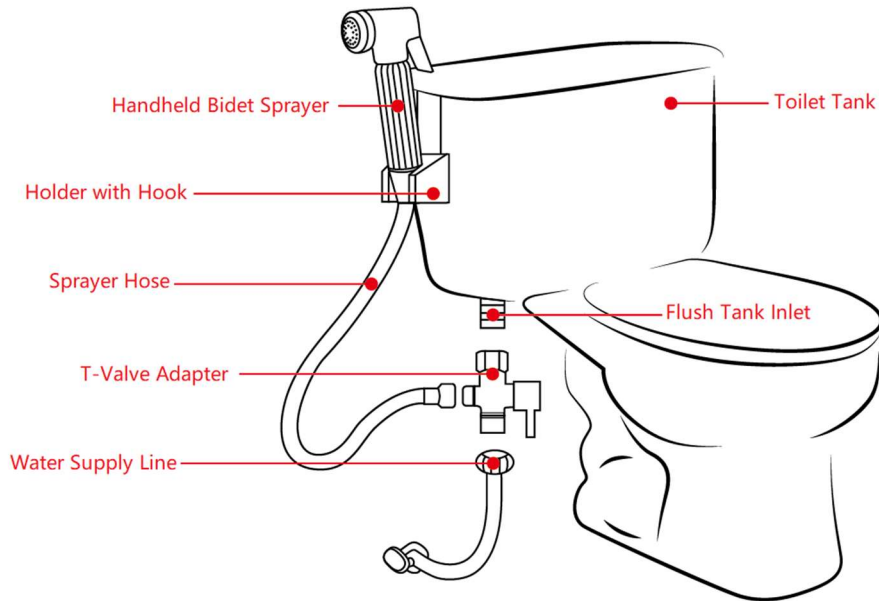

Operation:

NOTE: Water will always be on to the toilet tank for all positions of the T-valve Adapter Lever.

1. When the lever is at the LEFT position (by turning the lever CLOCKWISE), water is shut off to the SANICARE Bidet Sprayer
2. When the lever is at the DOWN position and water tank is filled with water, maximum water pressure will flow to the SANICARE Bidet Sprayer.
3. To control the water pressure, adjust the lever at the T-valve between the LEFT (off) and DOWN (max. pressure) positions.

Warning:

ALWAYS TURN OFF THE WATER SUPPLY TO THE BIDET SPRAYER AFTER EACH USE BY POSITIONING THE T-VALVE LEVER TO THE LEFT POSITION!

Failure to turn off after each use will weaken the internal components of the sprayer and hose, it may cause water damage or flooding. Manufacturer and/or seller is not responsible for any damages which may have been caused by failure to follow this warning or improper installation.